


INSTALLATION INSTRUCTIONS

FRONT SPROCKET COVER - HONDA REBEL

KIT CONTENTS

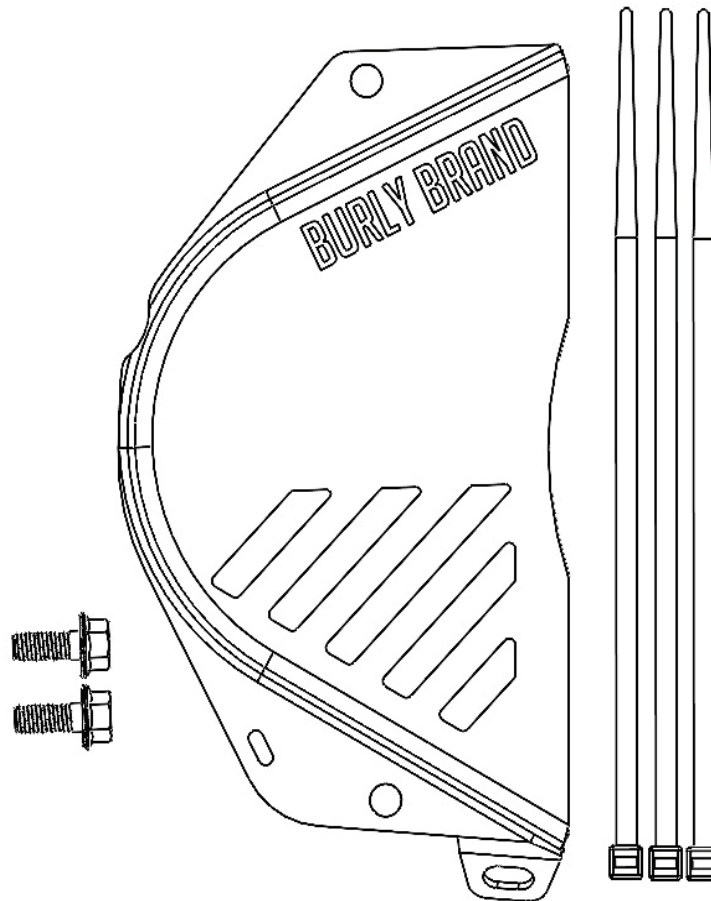

QTY	DESCRIPTION
1	SPROCKET COVER
2	HEX CAP SCREWS
3	ZIP TIES

LIMITED GUARANTEE

We continually inspect and try to improve our products. All parts have been inspected prior to packaging, and our guarantee is limited to replacement of defective parts. This guarantee is in lieu of all guarantees or warranties implied or expressed. Because we can not control the application of our products, the buyer assumes risks for any and all damage caused by themselves or any third party, by virtue of failure of these parts. We make no warranty as to products distributed by us, expressed or implied, including without limitation, any warranties or merchant ability and fitness for particular purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties. The manufacturer shall solely be responsible for any damage to person or property arising from design, manufacturing and testing of all products, and we accept no liability for such damages. We shall not be liable for indirect or consequential damages.

INSTALLATION INSTRUCTIONS

FRONT SPROCKET COVER - HONDA REBEL


WARNINGS & ALERTS:

- READ AND FOLLOW ALL INSTRUCTIONS TO PROPERLY INSTALL THIS KIT.
- IMPROPER INSTALLATION CAN CAUSE UNSATISFACTORY AND/OR UNSAFE OPERATION.
- READ ALL THE INSTRUCTIONS CAREFULLY BEFORE INSTALLING THIS KIT ON YOUR MOTORCYCLE. USE YOUR HONDA SERVICE MANUAL AS A REFERENCE WHILE INSTALLING THIS KIT.

INSTALLATION

(If equip with automatic shifting skip to step 3)

1. Remove the bolt holding top shift shaft in place, then remove from spline.

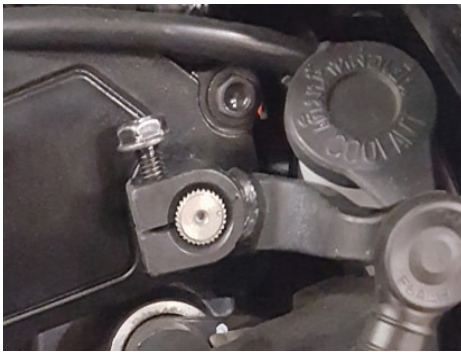

2. Remove the 2 bolts holding the rider foot peg mount and shift lever.
3. Remove the stock clip-in wire holder from the bottom of the stock cover.



4. Remove the 2 bolts holding the stock cover. The cover and bolts will not be reused, but the steel chain guard will.

5. Position the stock chain guard correctly so that the through holes and profile align with the Burly cover.



6. Insert the supplied bolts through the mounting holes and begin threading into the engine case.
7. Verify that hoses and wires will not get pinched and torque bolts to 6 ft-lbs.
8. Insert the stock clip-in wire holder into the Burly cover.
9. Route supplied zip tie through hole at the bottom rear of the case and around the rear vent tubes. Tighten zip enough to prevent hoses from contacting the chain.




INSTALLATION INSTRUCTIONS

FRONT SPROCKET COVER - HONDA REBEL

10. Route supplied zip tie through the slot on the burly cover to hole the gray wire sleeve.



11. Route supplied zip tie around wires and cables routed toward the front of the cover.

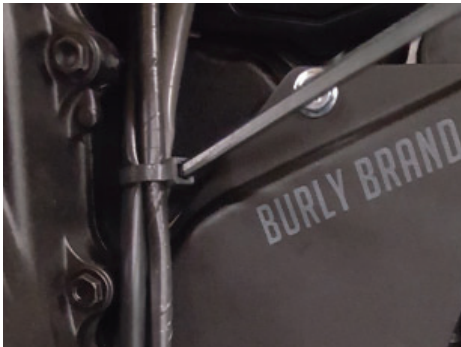

12. Remove access zip tie taking care not to cut any wires.
13. If equip with manual shift, reinstall rider foot peg mount and top shift link per service manual.

