


KIT CONTENTS

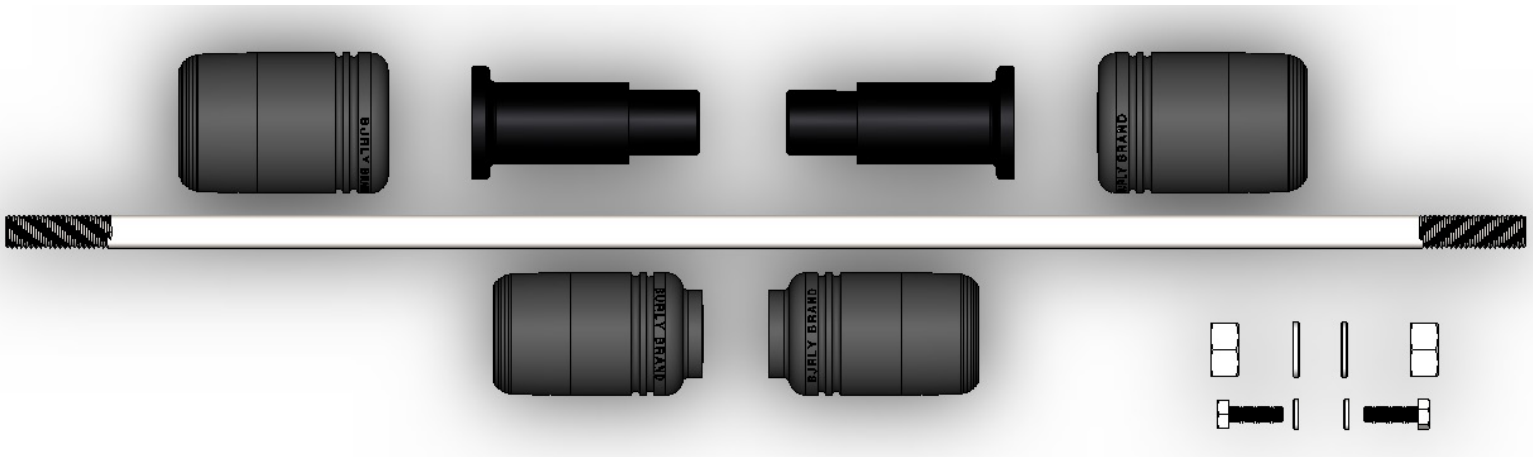

QTY	DESCRIPTION
2	HHCS M6
2	WASHER 11MM OD
2	FRAME SLIDER SLEEVE REAR
2	DELRIN SLIDER REAR
2	WASHER 20MM OD
2	NUT M12
2	FRAME SLIDER SLEEVE FRONT
2	DELRIN SLIDER FRONT
2	SLIDER STEM FRONT
1	THREADED ROD FRONT

LIMITED GUARANTEE

We continually inspect and try to improve our products. All parts have been inspected prior to packaging, and our guarantee is limited to replacement of defective parts. This guarantee is in lieu of all guarantees or warranties implied or expressed. Because we can not control the application of our products, the buyer assumes risks for any and all damage caused by themselves or any third party, by virtue of failure of these parts. We make no warranty as to products distributed by us, expressed or implied, including without limitation, any warranties or merchant ability and fitness for particular purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties. The manufacturer shall solely be responsible for any damage to person or property arising from design, manufacturing and testing of all products, and we accept no liability for such damages. We shall not be liable for indirect or consequential damages.

INSTALLATION INSTRUCTIONS

FRAME SLIDER - HONDA REBEL

WARNINGS & ALERTS:

- READ AND FOLLOW ALL INSTRUCTIONS TO PROPERLY INSTALL THIS KIT.
- IMPROPER INSTALLATION CAN CAUSE UNSATISFACTORY AND/OR UNSAFE OPERATION.

FRONT

1. Remove main engine stud using a metric socket and a hex socket bit set. From the left side, remove the OEM main engine stud, nut, and washer.
2. Install the new threaded engine stud and ensure there is about 4 inches of rod on both sides.
4. Install the Delrin frame sliders and orient the logo to your preference. Refer to the Honda service manual for torque specifications.



3. Install the new aluminum standoff on both sides of the frame.



NOTE: On the Honda Rebel 1100 DCT version, the plastic engine guard may need to be removed, pushed aside, or modified to install the aluminum standoff. See below.

DCT VERSION PICTURE




INSTALLATION INSTRUCTIONS

FRAME SLIDER - HONDA REBEL

REAR

1. Remove the OEM top shock bolts and washer from the left and right rear shocks.

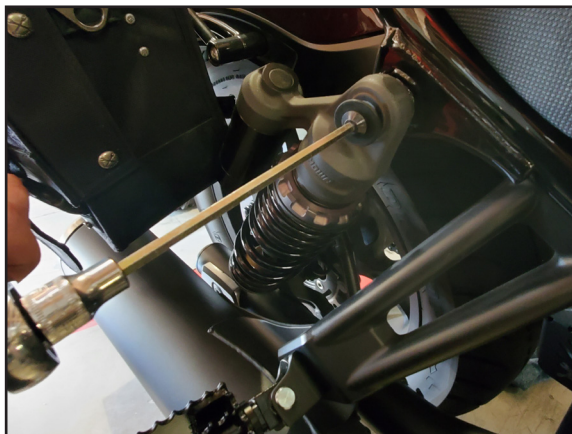

2. Using the supplied bolt and washer, torque to Honda specification. Refer to the Honda service manual for torque specifications.

