



## INSTALLATION INSTRUCTIONS

### HONDA REBEL FOOTPEG INSTALLATION

#### BURLY STREET RIDER FOOTPEG



QTY	DESCRIPTION
1	BURLY STREET RIDER FOOTPEG (LEFT)
1	BURLY STREET RIDER FOOTPEG (RIGHT)

#### BURLY STREET PASSENGER FOOTPEG



QTY	DESCRIPTION
1	BURLY STREET PASSENGER FOOTPEG (LEFT)
1	BURLY STREET PASSENGER FOOTPEG (RIGHT)

#### BURLY MX RIDER FOOTPEG



QTY	DESCRIPTION
1	BURLY MX RIDER FOOTPEG (LEFT)
1	BURLY MX RIDER FOOTPEG (RIGHT)
2	FHSH SCREW 7/16-14

#### BURLY MX PASSENGER FOOTPEG



QTY	DESCRIPTION
1	BURLY MX PASSENGER FOOTPEG (LEFT)
1	BURLY MX PASSENGER FOOTPEG (RIGHT)
2	FHSH SCREW 7/16-14

## LIMITED GUARANTEE

We continually inspect and try to improve our products. All parts have been inspected prior to packaging, and our guarantee is limited to replacement of defective parts. This guarantee is in lieu of all guarantees or warranties implied or expressed. Because we can not control the application of our products, the buyer assumes risks for any and all damage caused by themselves or any third party, by virtue of failure of these parts. We make no warranty as to products distributed by us, expressed or implied, including without limitation, any warranties or merchant ability and fitness for particular purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties. The manufacturer shall solely be responsible for any damage to person or property arising from design, manufacturing and testing of all products, and we accept no liability for such damages. We shall not be liable for indirect or consequential damages.

# INSTALLATION INSTRUCTIONS

## HONDA REBEL RIDER FOOTPEG INSTALLATION

### WARNINGS & ALERTS:

- READ AND FOLLOW ALL INSTRUCTIONS TO PROPERLY INSTALL THIS KIT.
- IMPROPER INSTALLATION CAN CAUSE UNSATISFACTORY AND/OR UNSAFE OPERATION.


1. Remove the heal guard above the footpeg.




2. Remove the cotter pin, joint pin, thin washer and spring.



3. Transfer the spring to the Burly foot peg, pay close attention to the orientation of the spring. Place the peg between the clevis, insert the joint pin. Place the thin washer on the end and install the cotter pin, bend the cotter pin to prevent it from backing out.

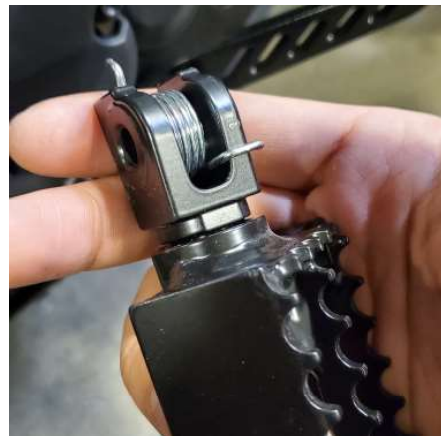

4. Verify the footpeg can move up and down and springs back to its neutral position.

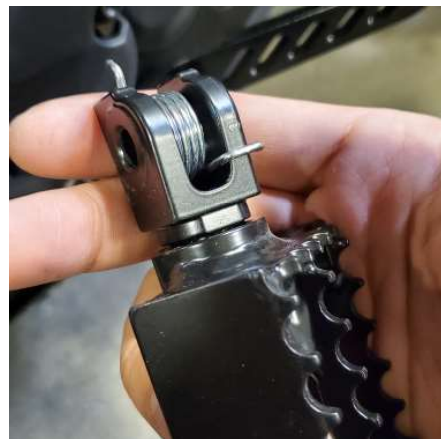

5. Reinstall your heal guard.



# INSTALLATION INSTRUCTIONS

## HONDA REBEL PASSENGER FOOTPEG INSTALLATION

1. Remove the cotter pin, thin washer, joint pin, detent plate, spring and ball.



2. Transfer the spring, ball and detent plate to the Burly peg. Insert the assembly into the clevis. Insert the joint pin and thin washer then install the cotter pin, bend the cotter pin to prevent it from backing out.



3. Verify the footpeg can move up and down and the detent system is working properly.

### PEG CLOCKING AND TORQUE

1. Do not tighten the countersunk bolt until the desired foot peg orientation is found.
2. Apply high strength thread locking compound and torque to 25 ft-lbs after the desired position is found.



If you need to change the orientation on the pegs be sure to reapply high strength thread locking compound and retorque to 25 ft-lbs

