


KIT CONTENTS

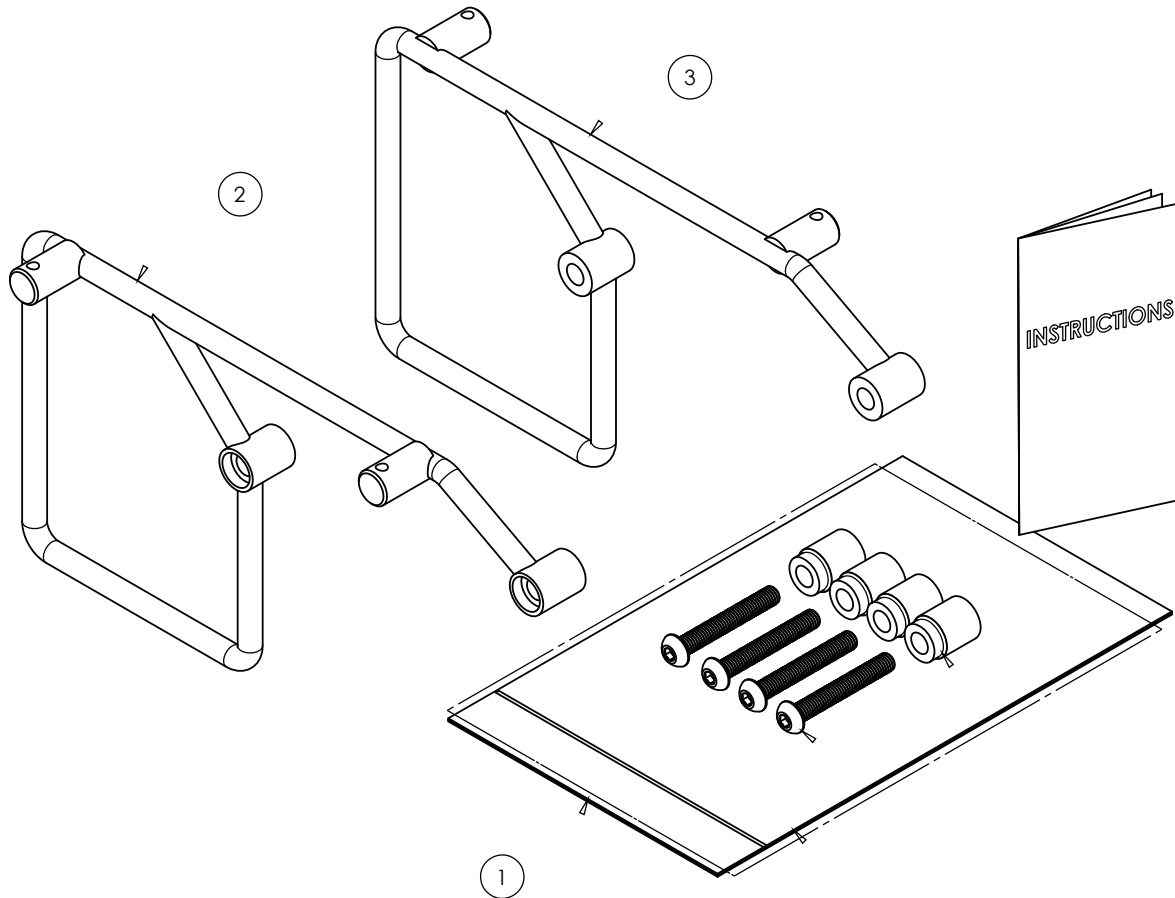

QTY	DESCRIPTION
1	HARDWARE KIT
1	SADDLE BAG MOUNT RIGHT
1	SADDLE BAG MOUNT LEFT

LIMITED GUARANTEE

We continually inspect and try to improve our products. All parts have been inspected prior to packaging, and our guarantee is limited to replacement of defective parts. This guarantee is in lieu of all guarantees or warranties implied or expressed. Because we can not control the application of our products, the buyer assumes risks for any and all damage caused by themselves or any third party, by virtue of failure of these parts. We make no warranty as to products distributed by us, expressed or implied, including without limitation, any warranties or merchant ability and fitness for particular purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties. The manufacturer shall solely be responsible for any damage to person or property arising from design, manufacturing and testing of all products, and we accept no liability for such damages. We shall not be liable for indirect or consequential damages.

INSTALLATION INSTRUCTIONS

HONDA REBEL 1100 SADDLE BAG KIT

WARNINGS & ALERTS:

- READ AND FOLLOW ALL INSTRUCTIONS TO PROPERLY INSTALL THIS KIT.
- IMPROPER INSTALLATION CAN CAUSE UNSATISFACTORY AND/OR UNSAFE OPERATION.
- THE OPERATOR MUST USE EXTREME CAUTION WHEN OPERATING A MODIFIED MOTORCYCLE, PARTICULARLY WHILE GETTING FAMILIAR WITH ITS ALTERED HANDLING CHARACTERISTICS.
- MAXIMUM LOADING CAPACITY: THE WEIGHT OF THE CARGO MUST NOT EXCEED THE FOLLOWING MAXIMUM LOADING CAPACITY
 - LEFT SADDLE BAG 3.0KG (6.6 LB)
 - RIGHT SADDLE BAG 3.0KG (6.6 LB)

1. Remove 4x stock screws and washers on rear fender. Set these aside they will not be reused.
2. Protect Fender paint w/ cloth, clean off mounting surfaces
3. Apply blue loctite to supplied bolt threads
4. Working on right side, insert the supplied bolt through 1 mount hole then through supplied collar with smaller OD mounted to fender trim. Thread but do not torque. Repeat the same steps for the remaining mounting hardware.
5. Final torque to 24 N·m
6. When installing the saddle bags to the mounts use soap and water to help installation. Secure with clips inside.

NOTE: If installing with sissy bar, do not use the supplied collar spacers.

